




IMAGING PRODUCTS GROUP PRODUCT DATA SHEET

Toll Free (US): 888-252-2676
Ph. 843-656-0950 Fx. 843-664-0197
www.imagingpg.com

IPG VIS2000-PRO VIDEO INSPECTION SYSTEM Pan and Tilt Camera For Pipe and Chimney Inspection

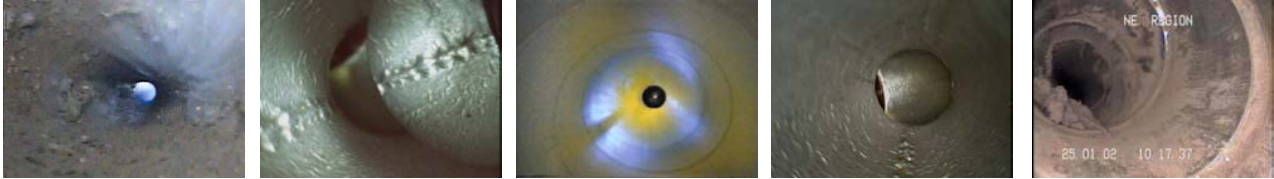

VIS2000 PRO MINI CAMERA SET - MODEL # 3312

(Miniature Color Camera Head Without Pan And Tilt)

Ideal for horizontal or vertical inspection of pipes from 1 1/4" to 6" diameter:
Chimneys • Water/Sewer Pipes • HVAC Units • Flue Lines • Ductwork

This economical unit in the VIS2000 PRO series features a 1" miniature color camera head (pan and tilt functions not available) to enable inspection of smaller diameter structures. The camera head is driven by a 65ft. long (6mm diameter) GRP camera rod with integrated distance measurement that shows on the large TFT display. Digital memory enables direct documentation of images and video.



SYSTEM INCLUDES:

- VIS2000-PRO Color Monitor with 6.5" TFT/LCD Display
- Leather Carrying Bag With Glare Protection & Shoulder Strap
- 1" Color Camera Head (WATERPROOF up to 100ft.)
- 65ft. GRP Camera Rod (6mm Ø) On Viper
- 128MB Compact Flash Card & 2.0 USB Reader
- VIS2000-Pro Power Supply
- Aluminum Transport Case



Technical Specifications:

Monitor VIS2000PRO

Resolution: 768 x 512 Pix (PAL)
640 x 480 Pix (NTSC)
Size: 6.5" display, 3 lbs.
Video Out: FBAS signal
Current Supply: 7.2 V, NiMH
Oper. Time: Approx. 1 hour
Work Temp.: 0 to 40°C
Standard tripod connection

Mini Camera Head

Type: 1/3" CMOS
Sensitivity: 3.0 Lux
Lens: f = 2.5 mm, F = 2.0
Field of view: 120°
Waterproof (IP 68): 100ft.
Dimensions: Ø1in. x 1.5in.
Weight: 0.13 lbs.